


# BöttcherPro Hydroclean

## Cleaning Concentrate for Fountain Systems

BöttcherPro Hydroclean is a cleaning concentrate for regular cleaning of fountain solution circulation systems in offset presses.

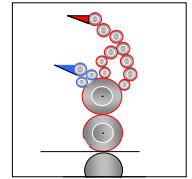

### Application

- ⊕ aqueous alkaline solution
- ⊕ free from formaldehyde
- ⊕ suitable for all presses and fountain systems
- ⊕ dissolves solid dirt
- ⊕ use at a concentration of 5 - 10 %




### Features


The fountain system must be emptied completely and refilled with fresh water. According to amount of contamination and dirt, add 5-10 % of BöttcherPro Hydroclean.

Pump the solution around the system for about 3 to 4 hours. Clean filters and pumps regularly during this time.


After the cleaning process, empty the system and rinse twice with water while pumping. Ensure all filters, tanks and pumps are cleaned of debris.

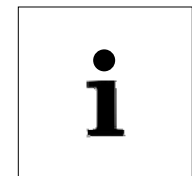

### Note

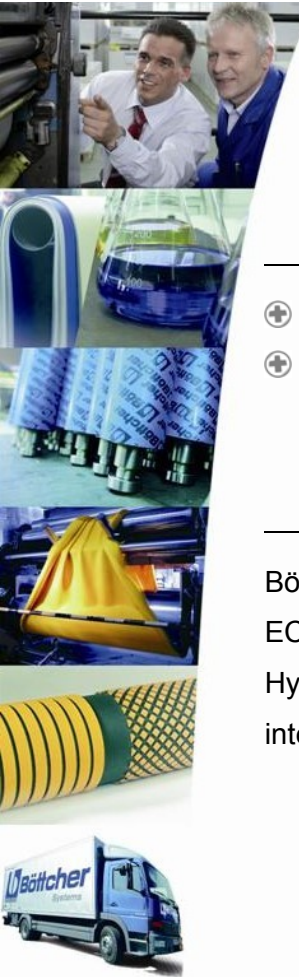


- ⊕ 20 kg can
- ⊕ 200 kg barrel

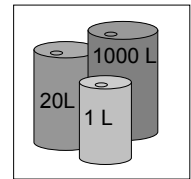

**Package**

BöttcherPro Hydroclean is classified and marked in accordance with EC-Directive 1999/45/EC - in its latest version. BöttcherPro Hydroclean is not a dangerous good in the sense of the national and international transport regulations.

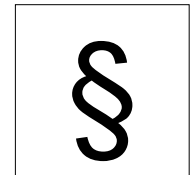

**Marking**

All our product information's you will find in the internet on [www.boettcher-systems.com](http://www.boettcher-systems.com). There you will also find out why **Böttcher is the world's number one roller supplier and leading provider of printing chemistry.**

<b>Felix Böttcher GmbH &amp; Co. KG - Germany</b> Phone +49 221 4907 0 Fax +49 221 4907 420 koeln@boettcher.de	<b>France</b> Phone +33 164 05050 Fax +33 1644 10890 info@boettcher-france.com	<b>Lithuania</b> Phone +370 422 50 538 Fax +370 422 50 538 bottcher@bottcher.lt	<b>Poland</b> Phone +48 22 73 16 110 Fax +48 22 73 16 111 office.pl@boettcher-systems.com	<b>Switzerland</b> Phone +41 41 784 1111 Fax +41 41 784 1112 office.ch@boettcher-systems.com
<b>Argentina</b> Phone +54 2322 466200 Fax +54 2322 4969 5 bottchersud@bottchersud.com.ar	<b>Great Britain - Ebbw Vale</b> Phone +44 1495 350300 Fax +44 1495 350064 sales@bottcher.co.uk	<b>Malaysia</b> Phone +60 380622042 Fax +60 3 80624203 bottcher@streamyx.com	<b>Russia</b> Phone: +7 495662 30 93 Fax: +7 495662 30 94 moscow@boettcher.ru	<b>Taiwan R.O.C.</b> Phone +886 2 8226 12 10 Fax +886 2 8226 12 11 bottcher@ms52.hinet.net
<b>Australia</b> Phone +61 2 96592722 Fax +61 2 96592744 mitch@bottcher.com.au	<b>Great Britain - Shipley</b> Phone +44 1274 530531 Fax +44 1274 530532 salesnorth@bottcher.co.uk	<b>Mexico</b> Phone +52 55 56743 128 Fax +52 55 553939 17 oordonez@bottcher.com.mx	<b>Singapore</b> Phone +65 64 632 81 Fax +65 64 63 1131 bottcher@singnet.com.sg	<b>Thailand</b> Phone +66 38 571600 Fax +66 38 570 540 anurux.sasamit@bottcher-systems.com
<b>Austria</b> Phone +43 16 74445 Fax +43 16 7444550 office@boettcher.at	<b>Hong Kong</b> Phone +852 234 9111 Fax +852 234 9155 kammyli@263.net	<b>The Netherlands</b> Phone +31 416 697190 Fax +31 416 697359 service@boettcher-systems.com	<b>Republic of Slovakia</b> Phone +421 2 638 8624 Fax +421 2 638 8625 bottcher@bottcher.sk	<b>Turkey</b> Phone +90 212 6599 338 Fax +90 212 6599 340 ozan.karaca@boettcher-systems.com
<b>Brazil</b> Phone: +55 11 66 8-1866 Fax: +55 11 6618-1866 fabio@bottcherdobrasil.com.br	<b>Hungary</b> Phone +36 76 505350 Fax +36 76 505352 bottcher@bottcher.hu	<b>People's Republic of China</b> Phone +86 512 63407100 Fax +86 512 63407557 office.suzhou@boettcher-systems.com	<b>South Korea</b> Phone +82 319076781-4 Fax +82 319076786 cjpark@boettcher.co.kr	<b>USA - Belcamp</b> Phone +1 410 2737000 Fax +1 410 2737174 wporter@bottcher.com
<b>Canada</b> Phone +1 800 2657655 Fax +1 9056128127 bnixon@bottcher.com	<b>India</b> Phone +91 1274 245287/88 Fax +91 1274 245290 boettcher-italy@boettcher-india.co	<b>P. R. of China - Shanghai</b> Phone +86 2162 00868 Fax +86 2162 529065 office.shanghai@boettcher-systems.com	<b>Spain</b> Phone +34 918859577 Fax +34 918859268 central@bottcheriberica.com	<b>USA - Tipton</b> Phone +1 765 6754449 Fax +1 765 6754111 JHoover@bottcher.com
<b>Czech Republic</b> Phone +420 517 326511 Fax +420 517 34 718 bottcher@bottcher.cz	<b>Italy</b> Phone +39 02 484171 Fax +39 02 48417342 boettcher@boettcher.it	<b>P. R. of China - Guangzhou</b> Phone +86 20 37585509 Fax +86 20 37585076 office.guangzhou@boettcher-systems.com	<b>Sweden - Nenne</b> Phone +46 565 16500 Fax +46 565 13659 info@boettcher-miller.se	

The purpose of these technical data is to assist our customers. We list general experience and laboratory tests. Translation of these to actual applications is, however, subject to a variety of factors which are beyond our control. We ask for your understanding that claims cannot be based upon them.